 
 



◆Change direction setting

① Enter into setting codes status	② Transmit reversing signal	③ Confirmation
		
Press[Setting] button for 3 seconds till the light on.	Press[Channel Selection] +[Stop] ,the LEDwill be flashing when the drive received the signal.	Press[Setting] button again to confirm the operation. The remote channel is set.

Minor exception handling

Exception phenomenon	May cause abnormal	Solution
Transmitter function invalid	Without power supply	Check the power supply is normal or not
	Lower battery	Renew battery
	Wrong remote setting	Re-set the remote
	Over the long-distance	Used in the remote operation range
Remote channel automatic variety	Lower battery	Renew battery
	Renew battery	Re-select remote channel
LED flashing in abnormal or light is off	Remote without battery	Install battery
	Lower battery	Renew battery

Warranty

 
This products carry a one year warranty from the date of invoice. Factitious damage and disassembly are exclusions from warranty.

HDL Automation Co., Ltd.
No. 86 Lianhua Road West, Shilou Town, Panyu District,
Guangzhou, China (Post Code: 511447)
E-mail: support@hdlautomation.com
Website: https://www.hdlautomation.com

HDL[®]


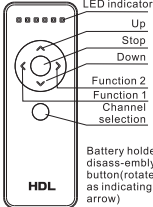 
YR2112/YR2116

Remote Control Specification

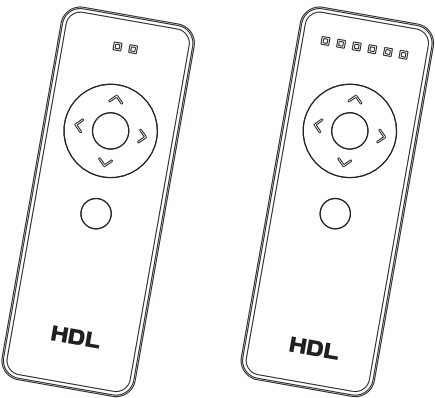

Product specification

Model	YR2112/YR2116
Transmission power	≤10dBm
Transmission frequency	433.92MHz±75KHz
Modulation mode	OOK/ASK
Battery	CR2450×1PC(3.3V)
Remote channel	2channels/7channels



* YR2112 has 2 LED indicators, YR2116 has 6 LED indicators



(Take YR2116 as an example) (Back face)

Functions of buttons

- [Up] [Stop] [Down] respectively transmit the position up, stop & down signals under the channel was selected.
- [Channel Selection] is used for remote control channels circularly.
- [Channel Setting] button is only used to set remote channels, please refer to 《setting methods》 .
- [Function1] & [Function 2] are used as intermediate stop functions for opening and closing curtains, applicable for Venetian blind, roller blind be provided with tilting function. Other system with relevant function. Please refer to 《product instruction manual》 for more details.

Combination functions

Combination buttons will transmit function signals as below:

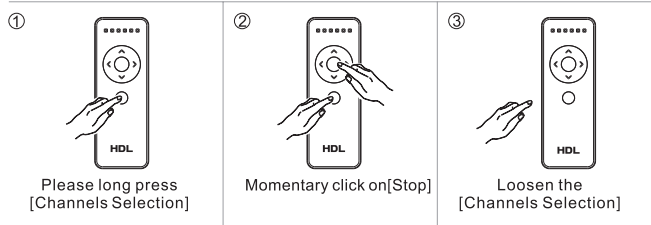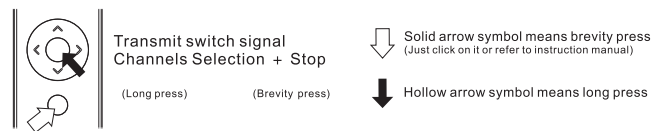

★ Attention

- Combine buttons is effective only with receiver of correspond functions.
- Make use of the combine buttons function should be selected the current channel transmit.
- The setting and methods will be a little different if combined to use with different receivers for details please refer to instructions manual.

Channels selection+stop		Channels setting+stop	
	Transmit signal to change direction		Transmit signal to delete limit
Channels selection+up		Channels setting+down	
	Transmit setting to set upper position		Transmit signal to set lower position
Channel setting+function button1		Channel setting+function button2	
	Transmit signal to set position1		Transmit signal to set intermediate position2 for setting
	Transmit signal to use touch control		Transmit signal to cancel touch control
Channels selection+channel setting			
	Transmit signal to switch external modes		

Remote control setting

Basic remote control setting

- Before using the remote control function, the user must perform "Set remote channel" operation, in order to store the remote control channel into the controller. as soon as the motor receives remote control signal, it will act in response as setting.
- If you need to make remote control channel invalid, you can perform the "Delete remote channel" operation.
- When the rotating direction of motor is not same as the desired direction, you can do "Change the direction" operation for correcting it only by working with the transmitter.

★YR2112 attention :

- It changes to the third channel when both LED light turn on at the same time.
- When selecting the third channel, the remote could control the motor which is programmed by the first and second channel for (open), (close), (up tilting), (down tilting) operation, useless for other settings.

Matching with drapery motors system setting and usage information and procedures.

As below:

◆Remote control channel settings

①Enter into setting codes status	②Choose channels
Press[Setting] button for 3 seconds till the light on.	Press[Channels Selection] button to choose the needed channel.
③Send the current channel code	④ Confirmation
Press [Channel Setting] button on the back of transmitter till the indicator light of the motor sparkles.	Press[Setting] button again to confirm the operation. The remote channel is set.

◆Delete remote control channels

①Enter into setting codes status	②Delete remote control channels
Press[Setting] button for 3 seconds till the light on.	Press[Setting] button again for 7 seconds till the light off. Channel deleting is completed.