








Description/steps

HDL-MIR01L is a IR learner, it can learn the IR codes. No USB driver is needed for this IR Learner.

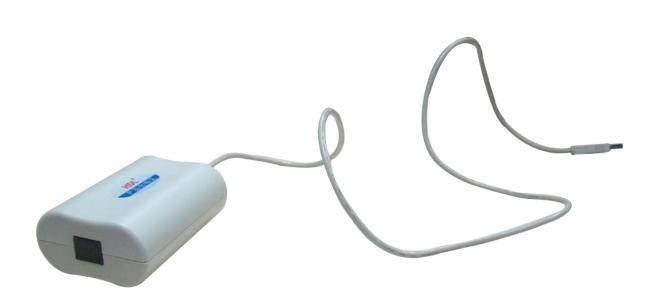




1. Connect to PC




2. Enter IR Learner from Utility



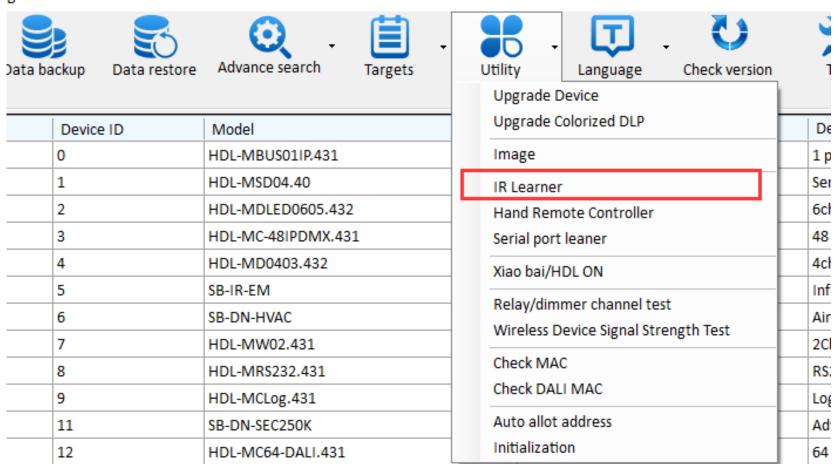



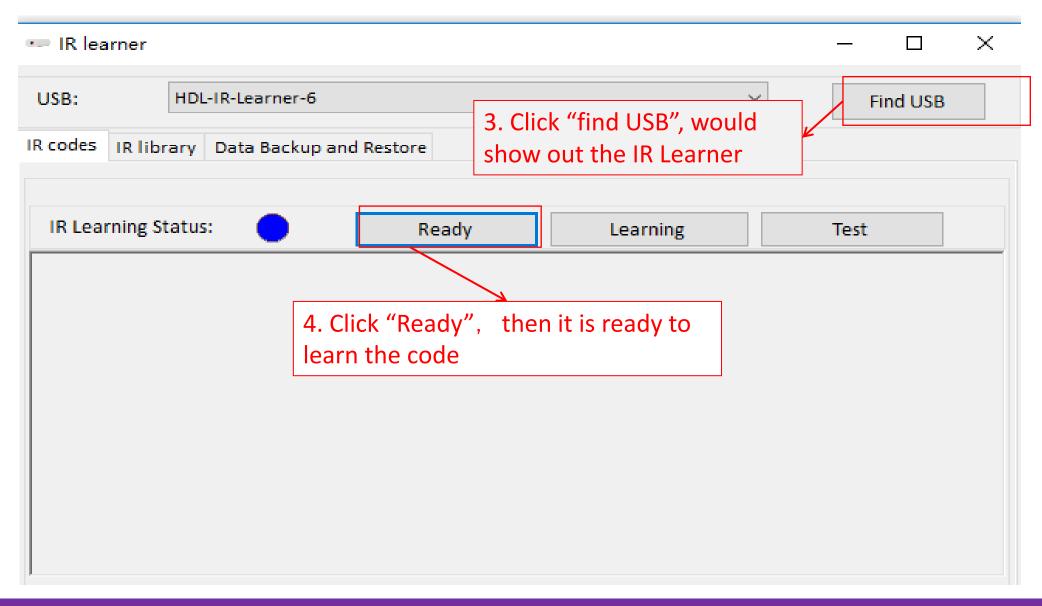








5. Put the remote close to the IR learner and press the key you want the IR learner to learn.



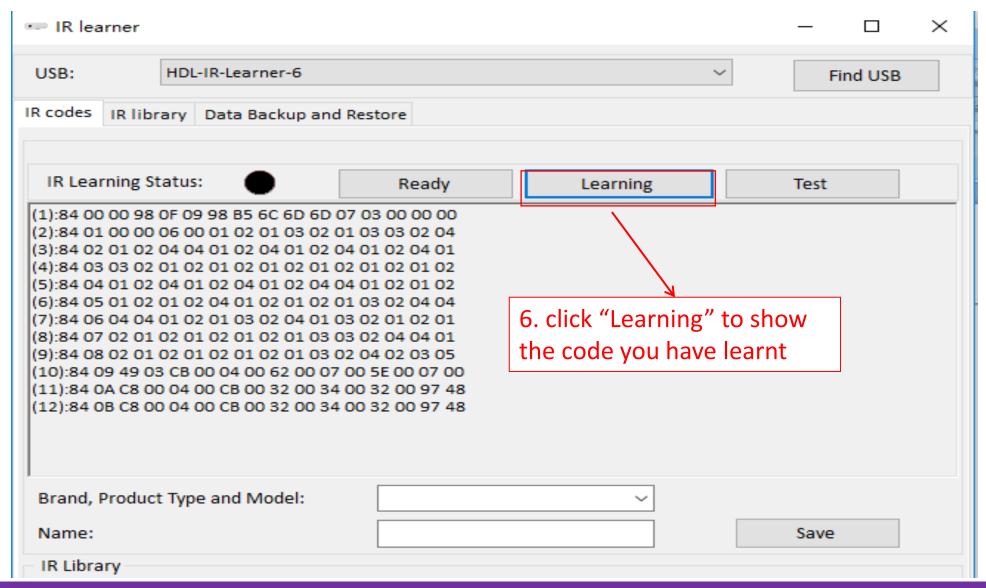








■ IR learner	_		×
USB: HDL-IR-Learner-6 V	Fir	nd USB	
IR codes IR library Data Backup and Restore			
IR Learning Status: Ready Learning	Test		
(1):84 00 00 98 0F 09 98 B5 6C 6D 6D 07 03 00 00 00 (2):84 01 00 00 06 00 01 02 01 03 02 01 03 03 02 04 (3):84 02 01 02 04 04 01 02 04 01 02 04 01 02 04 01 (4):84 03 03 02 01 02 01 02 01 02 01 02 01 02 01 02 (5):84 04 01 02 04 01 02 04 01 02 04 04 01 02 01 02 (6):84 05 01 02 01 02 04 01 02 01 03 02 04 04 (7):84 06 04 04 01 02 01 03 02 04 01 03 02 01 02 01 (8):84 07 02 01 02 01 02 01 02 01 03 03 02 04 (10):84 09 49 03 CB 00 04 00 62 00 07 00 5 (11):84 0A C8 00 04 00 CB 00 32 00 34 00 3 (12):84 0B C8 00 04 00 CB 00 32 00 34 00 3	o learı	n	
Brand, Product Type and Model:	Save		
IR Library			



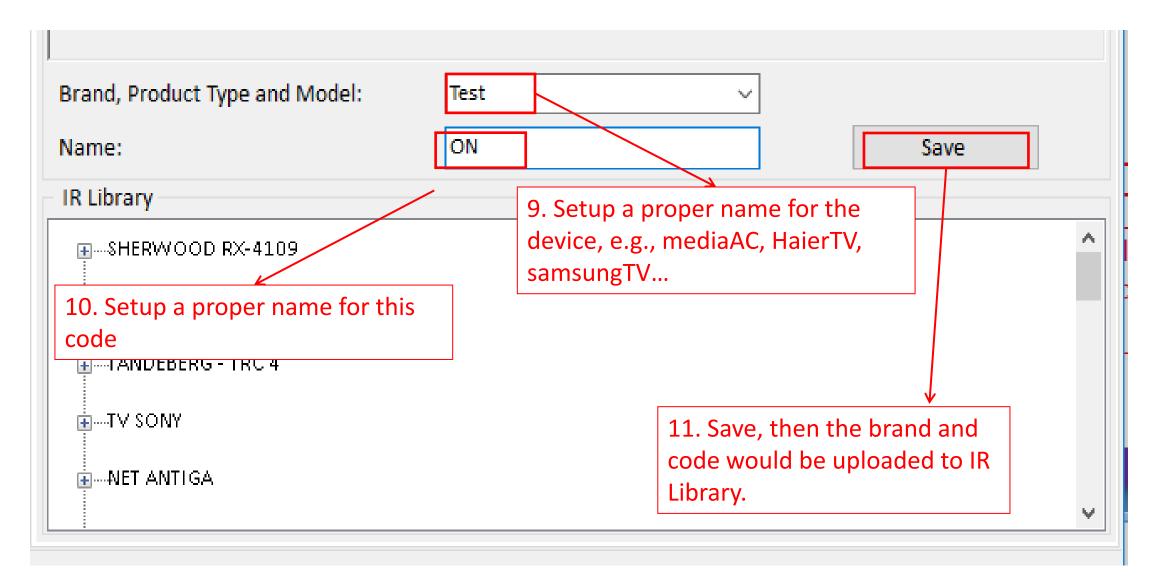

Serious about smart buildings.