

# Instructions for installation of modular outlets typeline HDLA iSocket

## 1. During installation of the modular outlets, the following conditions must be observed:

- Mounting box must be placed flush with the plaster
- The modular outlet is fastened in the mounting box through a sheet-metal frame by means of two screws of 3 mm diameter
- To install multiple fitting assemblies, it is necessary to use multiple boxes with the spacing of centres of 71 mm
- It is recommended to place the modular outlets in the mounting boxes at the approximate depth of 42 mm
- Put the modular outlets into the sheet-metal frame (Fig. 1)
- Modular outlets can be HDMI, RJ45, SAT, USB

## 2. Finishing the modular outlets:

- Put the metal frame with modular outlets into the mounting box and secure it by tightening two screws
- Set the glass frame onto the modular outlet, insert connection part and secure it by tightening the screw (Fig. 2)
- Take extra caution when mounting into Glass frames, tighten screws with a torque of 0,05 Nm, full tightening can create material stress and eventually cause breaking of Glass frame.

Fig. 1





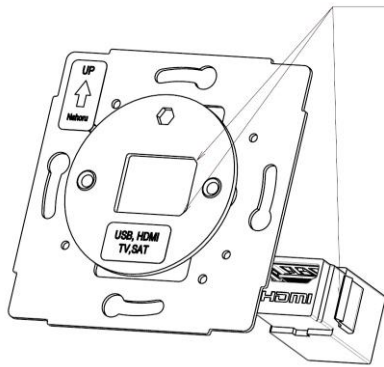


Fig. 2

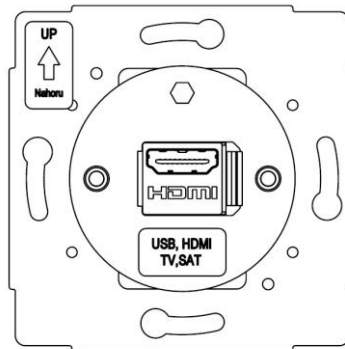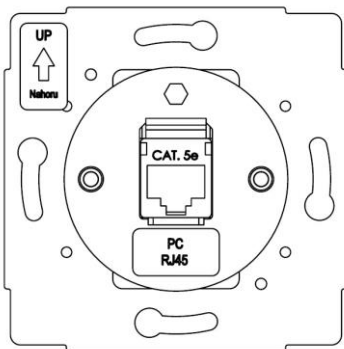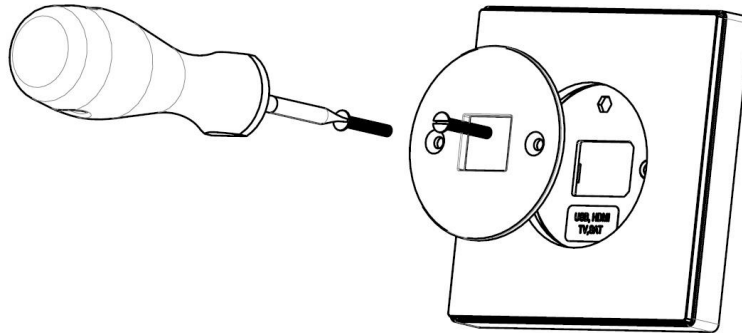

Modular outlets HDMI, RJ45, SAT, USB



### Maintenance:

The modular outlets device do not require any maintenance!

Device covers must never be wiped or washed by abrasive cleaning cloths or aggressive chemicals (petrol, acetone, etc.) may be used on them.

The product contains no hazardous substances; after expiration of its service life, it must be handled in conformity with the waste act in force or pertinent related regulations.